
DONIC Pongbot™- Smart Robot Touch Screen

E-PADS(OMNI)

Operation Manual

Model: E-PAD (OMNI)
Version: 1.0



DONIC Sportartikel Vertriebs-GmbH


Vorderster Berg 7
89233 Vöhringen, Allemagne

info@donic.com

If you encounter any problems during use, please reach us via email **robot@donic.com**

Or you may download the "Pongbot" APP from app stores and watch "Help & Support" videos under "User Center"

Pongbot APP



Create account and log in. Select and enter "User Center"



Enter "Help & Support" and select your device type



Here you may find a list of support videos

Safety Information

To avoid danger and illegality, please carefully read and follow all of the below mentioned safety information prior to installation and utilization of the device

Safety Instructions

To avoid physical fatigue, please do not exercise long-termly

- Please use and store the device and its accessories under the environment of 14°F ~ 113°F (-10°C ~ 45°C). When the temperature is too high or low, an error might occur
- Please do not expose the device to the surroundings of other high-temperature devices, including heater, microwave, oven, water heater, etc.
- During use, the power outlet should be close to the device and within reach.
- When not in use, please disconnect the power adapter from the device and remove the power plug from the outlet
- Be aware that unicertified or incompatible power adapter might cause fire, explosion and other potential danger
- Please only use accessories that are certified by the device manufacturer or corollary equipment of the device. Any other type of accessories might result in violation of national warranty and related regulations that could cause safety incidents. Please contact Future Mind's Customer Service Center for certified accessories
- Use of uncertified, third-party software during firmware and system update might result in dysfunctional device or leakage of personal information. To upgrade, use of official APP is highly recommended


CE / UKCA Compliance

Shanghai Future Mind Co., Ltd. declares that this product complies with all applicable requirements of the relevant EU directives and regulations and the applicable statutory requirements in Great Britain.

The EU Declaration of Conformity and the UK Declaration of Conformity for the **DONIC PONGBOT OMNI S PRO** are available at: www.donic.com

Product Info

1 E-PAD S



2 Power Cable



Product Specifications

Screen Size	139.6 x 69.7 mm (5 in)
Resolution	800 × 480 DPI
Wireless Communication	Bluetooth
Battery Capacity	2100 mAh
Rated Voltage	5 V
Rated Current	500 mA
Charging Portal	USB Type-C
Valid Distance	10 m
Product Size	154 × 102 × 39 mm
Net Weight	0.3 kg
Operating Frequency	2.4 GHz ~ 2.5 GHz
MAX. EIRP	20.5dBm

Quick Set-up

1 To turn on device, press and hold "On/Off Button" until screen lights up.



2 If language selection is needed, click "Settings" from home page and choose between Chinese and English.



3 Follow the steps below to connect E-PAD to robot. Once it's successfully connected, there is no need to repeat this procedure for further uses.

3.1 Double click "Key Button" on the robot (located next to "Power Button"), the LED indicators at the front of robot should flash in yellow, this suggests that the robot is ready to connect



3.2 Click "Bluetooth" from home page, then click "Connect"



3.3 Once E-PAD is successfully connected to robot, the result can be shown as below



4 Drill Example: Program - Basic Technique - Forehand Drive



4.1 Select "Program"



4.2 Select "Basic Technique"

Continues in the back

Warranty Card

Pongbot™ DONIC Smart-Touchscreen

Customer Info

Name: _____ Address: _____

Phone: _____ Postal Code : _____

E-Mail: _____

Product Info

Model: _____ SN: _____

Origin: _____ Email : robot@donic.com

Retailer Info

Name: _____ Address: _____

Phone: _____ Postal Code : _____

Invoice #: _____ Date of Sale : _____

Retailer Stamp :

Warranty

The consumer's statutory rights under the applicable laws of the European Union and Great Britain remain unaffected. These statutory rights are not limited or replaced by this voluntary warranty.

This voluntary warranty does not cover damage resulting from, including but not limited to

- improper use or incorrect power supply
- unauthorized repairs, modifications or alterations;
- use of accessories not approved by the manufacturer;
- normal wear and tear;
- external influences such as transport damage, fire, water or other force majeure events.

This voluntary warranty does not apply to products for which the warranty period has expired.



4.3 Select "Forehand Technique"-"Drive"



4.4 Click "START" and begin exercising

Features



Home Page

1 Settings



- Language
- Dominant Hand
- Screen Auto-Lock
- Voice
- Drop-Point Calibration
  (applicable to all programmed drills)

2 Connect to Robot



3 Top 5 Most Used Program Drills



Select a drill and quickly start this exercise

4 Program Drills



4.1 Basic, Combined and Complex Technique



4.2 Program Drill Serve-Settings
- Select difficulty level
- Choose serve mode between "Time" and "Combo", set repetitions according to need
- Choose a serve sequence



4.2.1 Calibration
Here you may calibrate all of the landing-points throughout this drill according to needs, click "Save" to return to the previous page where you may start the drill



4.2.2 Program Drills in Process
Difficulty level, landing-point and frequency can be adjusted according to needs even during training

5 Customized Drills



Supports a maximum of 60 sets of customized drills



5.1 Create New Customized Drills
- To create a new customized drill select "Add New +"
- Here you may customize each and every single ball within this drill according to need
- Click "Save", then you may find this drill on your list of customized drills



5.2 Adjust Customized Drill Settings
Select "Edit Combo" to adjust or revise the settings for this drill if needed



5.3 Customized Drills in Process
Landing-point and frequency can be adjusted according to needs even during training

6 Pong Smart



Supports a maximum of 60 sets of Pong Smart drills



6.1 Create New Pong Smart Drills
- To create a new customized drill select "Add New +"
- Here you may customize each and every single ball within this drill according to need
- Click "Save", then you may find this drill on your list of customized drills



6.1.1 Random Zone
Select "Random Zone", choose among short, middle or long court, then a random ball is set up within the chosen court area



6.2 Adjust Pong Smart Drill Settings
Select "Edit Combo" to adjust or revise the settings for this drill if needed


7 APP Sync



Supports a maximum of 20 sets of synchronized drills from APP

OTA Upgrade Through APP

① For your convenience, the following steps require the use of Pongbot APP, please search "Pongbot" at app stores and download

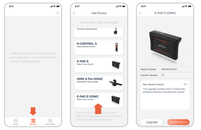

1 . 1
Create an account and log in. Select "Device" and click "+" to add new device

1 . 2
Select your device type and start connecting

1 . 3
Enter the device. If upgrade is required, follow instructions

Copyright © Shanghai Pongbot World Co., LTD. All rights reserved. This guide is for reference only and does not constitute any kind of commitment. Products (including but not limited to color, size, weight, etc.) shall prevail in kind.